

EXOST™

SUPER WHEEL TRUCK GIRL

 
 
 


pdt_im_20258_v01.indd 1

14/5/2019 17:35:51



SK17007

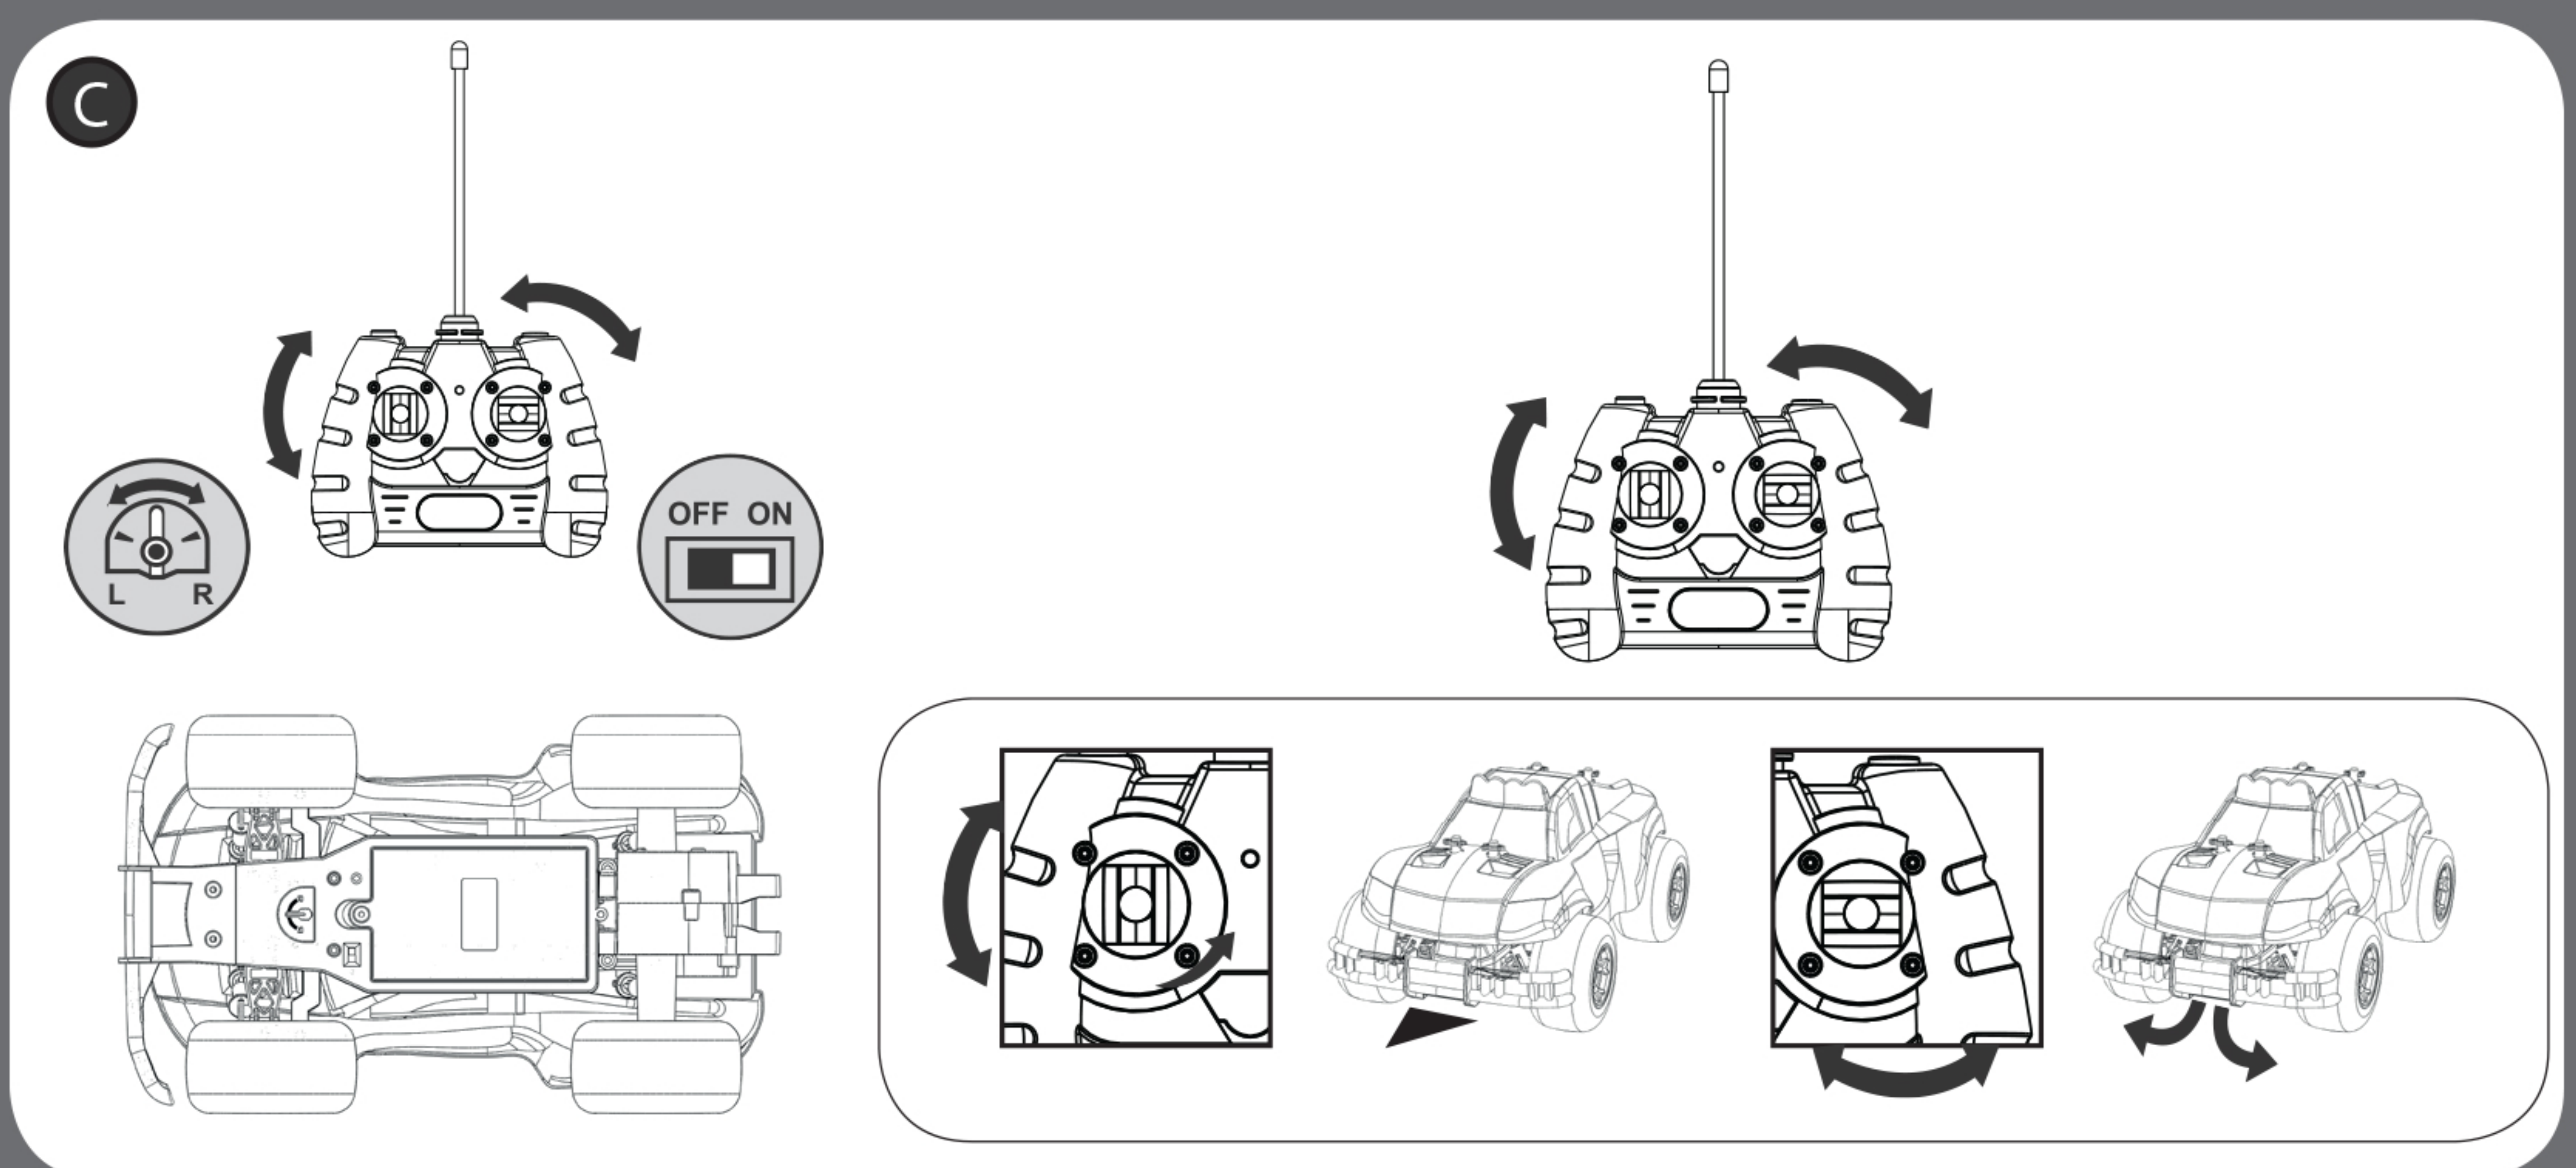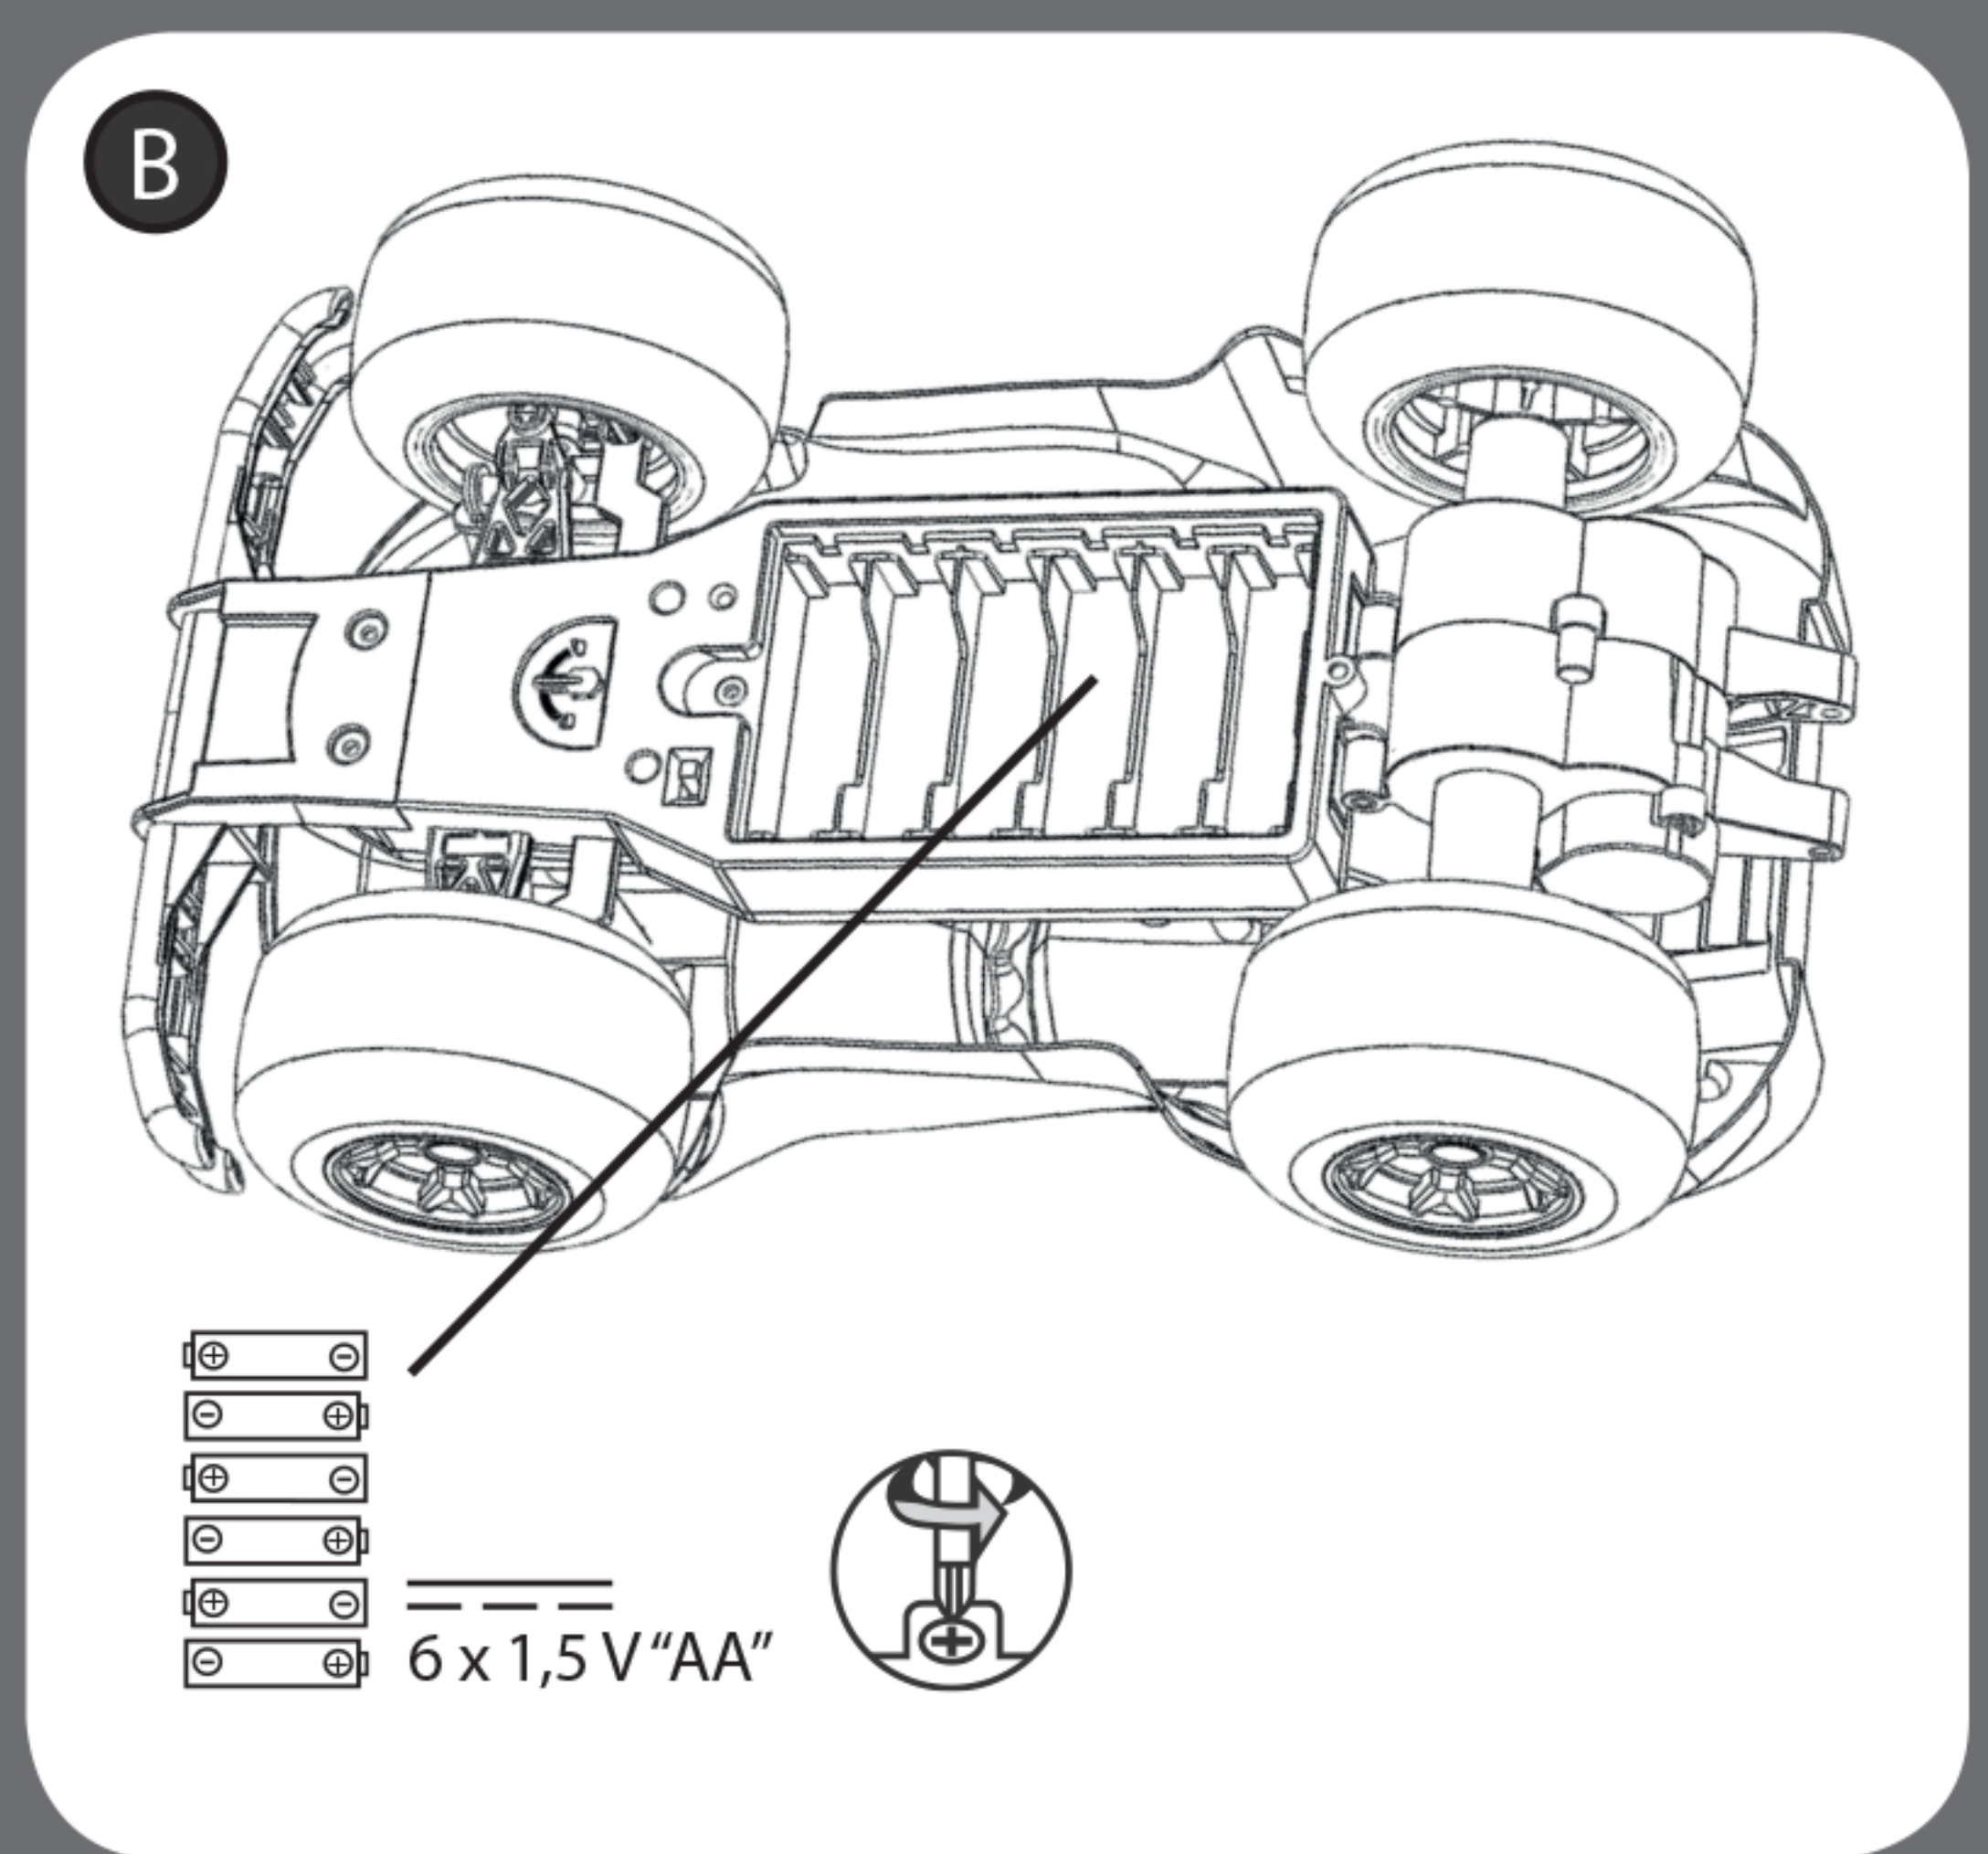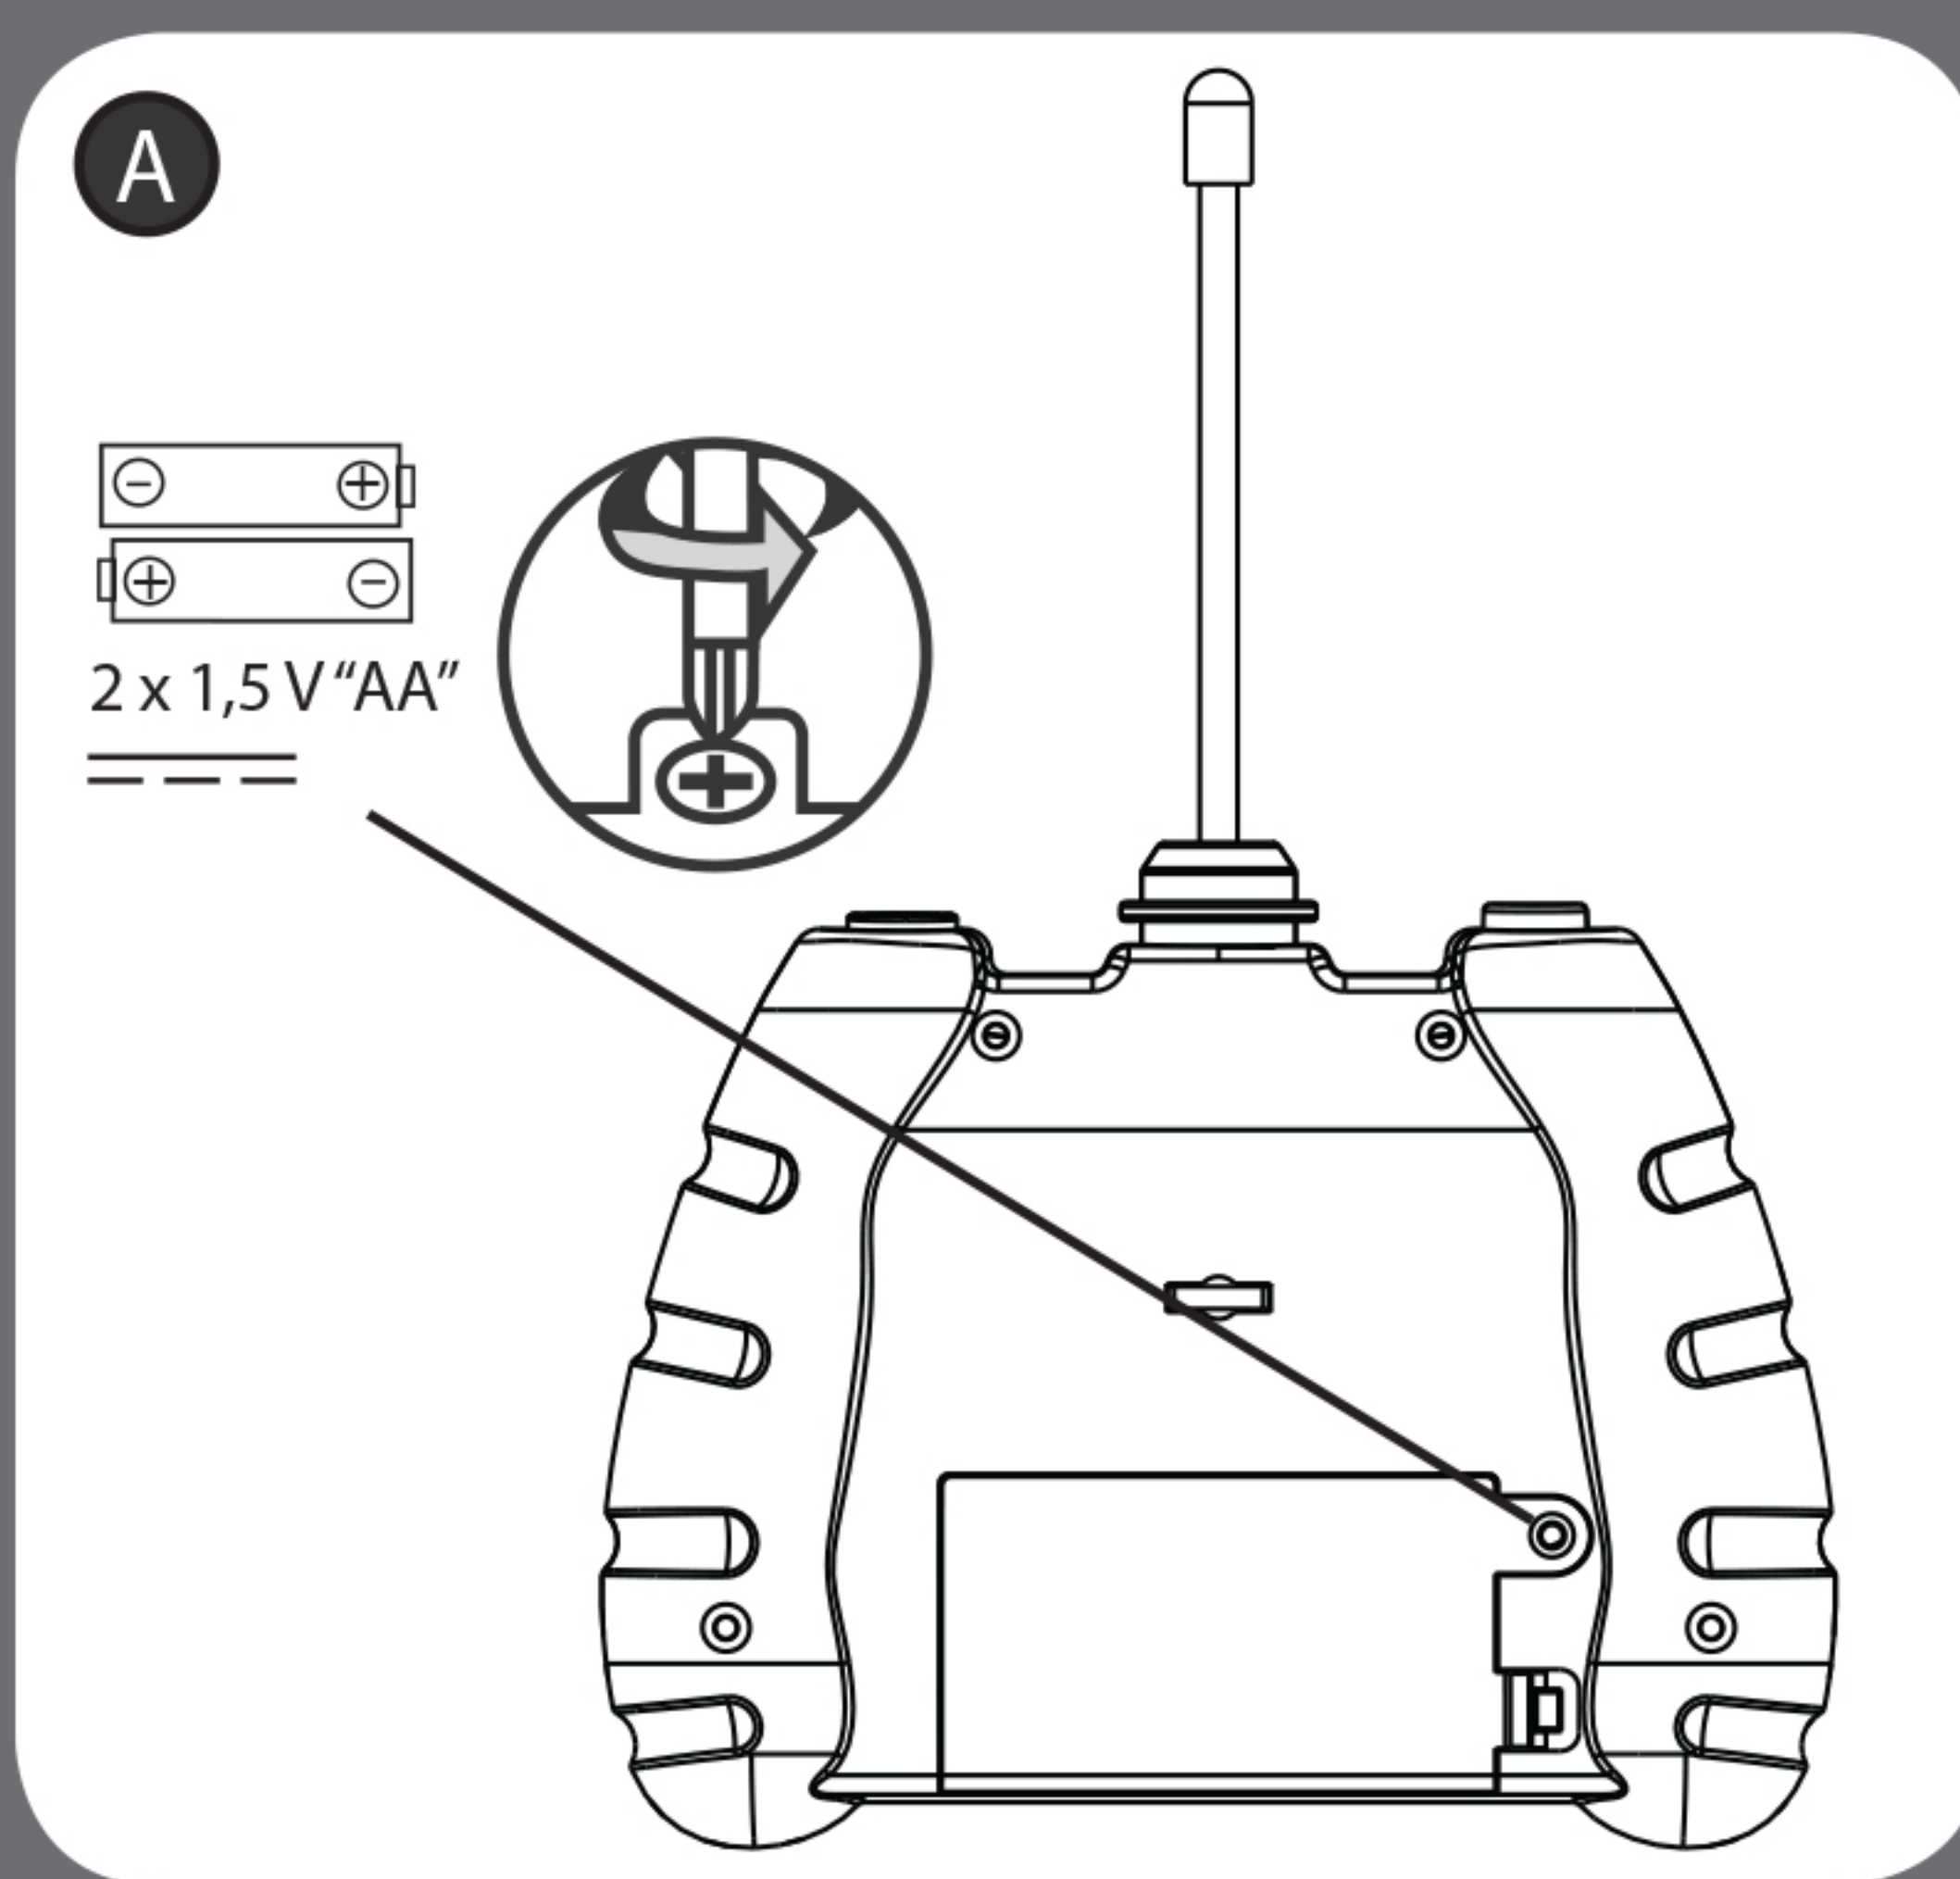

P 2

pdt_im_20258_v01.indd 2

14/5/2019 17:35:52

A Installing batteries in the transmitter:

- 1 - Open the battery compartment.
- 2 - Insert AA battery, respecting the + and - polarities.
- 3 - Replace the cover.

B Installing the vehicle battery:

- 1 - Make sure the ON/OFF switch is set to OFF.
- 2 - Open the battery compartment.
- 3 - Insert AA batteries, respecting the + and - polarities.
- 4 - Replace the cover.

C Starting:

- 1 - If necessary, screw the antenna into the hole on the top of the remote control.
- 2 - Extend the antenna fully. Start the car.
- 3 - To move the car forwards or backwards, push the throttle lever forwards or backwards or press the trigger (depending on the model).
- 4 - To turn the vehicle left or right, press the steering lever to the left or right. Or, depending on the model, turn the steering wheel

or move the 2 levers in opposite directions to turn.

5 - To stop the vehicle, release the throttle lever.

6 - If the car tends to drift to the left or right on its own, move the trimmer (beneath the car) to the right or left respectively to adjust the steering.

7 - For best performance, always point the antenna towards the car.

TROUBLESHOOTING GUIDE :

- Make sure the vehicle power is on.
- Make sure the batteries in transmitter and vehicle have sufficient charge.
- Check if the batteries in transmitter and vehicle are inserted with correct polarity.
- Check if the distance between transmitter and vehicle will not exceed more than 25m.
- Two or more vehicles of the same frequency will interfere with each other. In such a case, move to another place or try after a while.

GB

P 3